

Using Your Mains Charger

Safety Instruction

- Please note that charger can become warm during the charge cycle.
- Do not attempt to open the charger.
- Keep the charger in a dry place (indoor use only).
- In order to avoid the risk of fire and /or electric shock, the charger must be protected against high humidity and water.
- Do not use the charger if there are any signs of damage to the housing, mains, pins, cables or connectors.

In case of a defect please return to an authorized service centre

- Keep the charger out of reach of children.
- If the safety instructions are not followed, damage to the charger, batteries or even serious injury to the user may occur.

Operation Instructions

- Remove the charger from the packaging.
- Plug the charger to the wall socket.
- Connect the relevant device to the charger.
- Please remove the charger from wall socket if not in use.
- Recycle the product if not needed.

Specifications

- Model: SP-TC21A
- Input: 100V-240V AC 50/60Hz 0.15A
- Output: Max DC 5V 1A
- Short Circuit and Overload Protection
- Switching voltage.
- High charging efficiency.
- Fuse inside.

Caution

- Risk of electric shock.
- Dry location use only.
- Disconnect AC power when not in use.

